


INSPECTION MIRROR ASSEMBLY GUIDE

1. Attach the Telescopic Handle to the Mirror base as per diagram below (if not already assembled).
2. Tension the Nyloc Nut as necessary (do not over tighten, as damage may occur to aluminum handle).

NOTE: Base Light Accessory is NOT included. Can be purchased seperately.

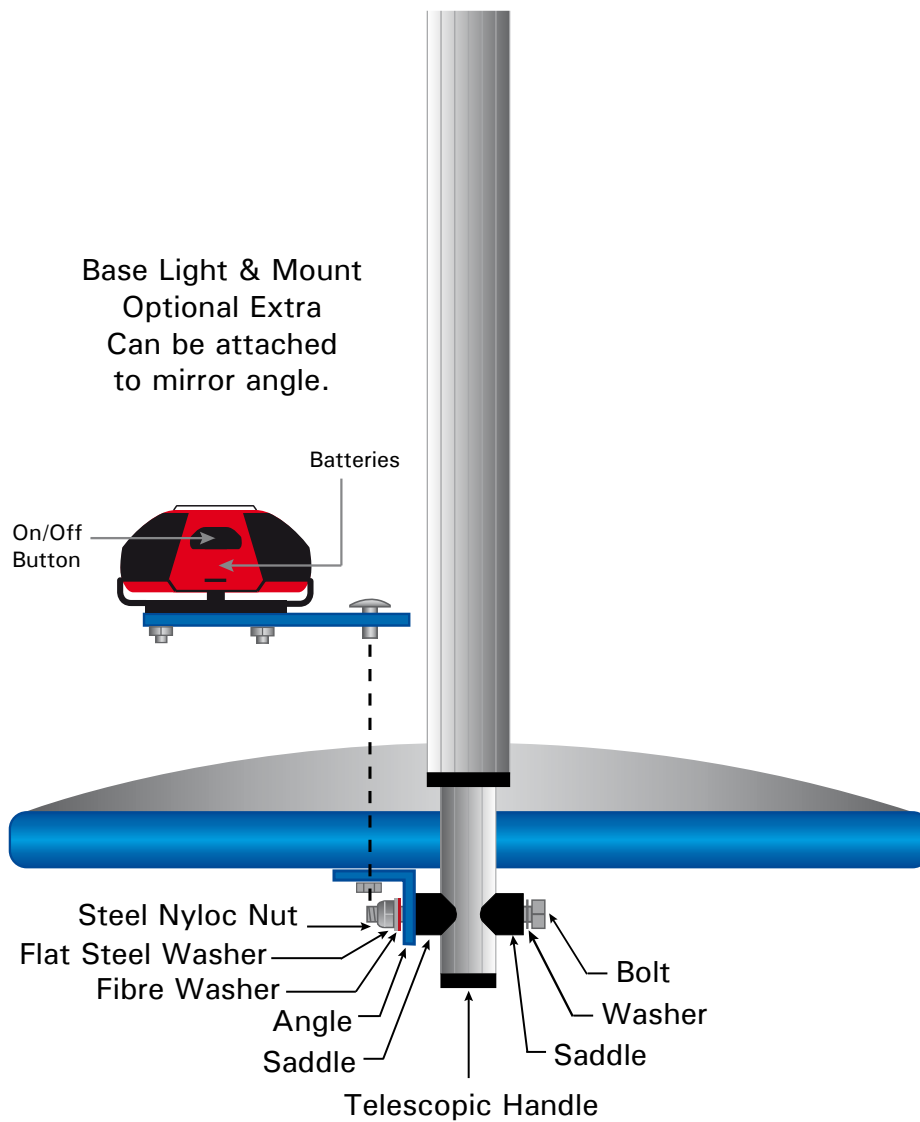

CONVEX MIRROR SHOP

Victoria
Australia

contactus@convexmirror.com.au
www.convexmirror.com.au

1800-802-506

